

AT-100ProII Autotuner Quick Reference

Operation

Func: Activates secondary function of other buttons.



Function Mode Off

Function Mode On

Ant: Selects the active antenna port.

C Up: Manually increase capacitance.

C Dn: Manually decrease capacitance.

L Up: Manually increase inductance.

L Dn: Manually decrease inductance.


Tune:

- Momentary push places tuner in bypass.
- Medium Press > 0.5 sec initiates a memory tuning cycle
- Long Press > 2.5 sec initiates a full tuning cycle.
-

Func – Peak: Displays average power (for 100% duty cycle modes) or peak power (for varying duty cycle modes)

Func – Scale: Toggles the bargraph display between in 0-12.5 and 0-125 watt ranges.

Func – Auto: Toggles between automatic and semi-automatic modes

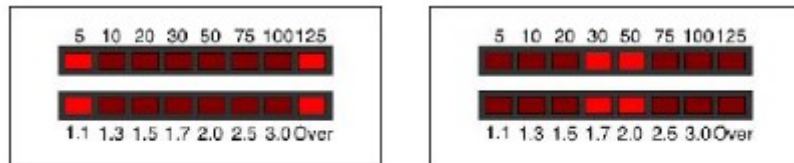


Semi Mode

Auto Mode

Func – Thresh: Sets the threshold for the automatic tuner to kick in

Error Codes


ERR_NO_MATCH: Unable to find a suitable match below 3.5:1.

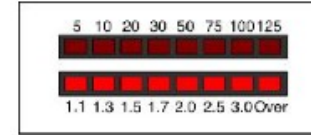

ERR_NO_MATCH: SWR
LEDs Blink Twice


ERR_NO_RF: No RF power was present at the beginning of a tuning cycle.

ERR_LOST_RF: RF power disappeared before the tuning cycle completed.

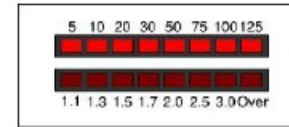


ERR_NO_RF: Blink Once
ERR_LOST_RF: Blink Twice

ERR_NO_FREQ: Unable to determine operating frequency.

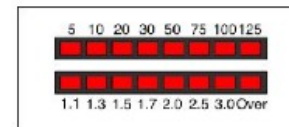

ERR_NO_FREQ:
All LEDs Blink Twice

ERR_SWR_PWR: Relay protection activated. Relays will not toggle if the SWR is over 3.0:1 while the power is over 125 W.

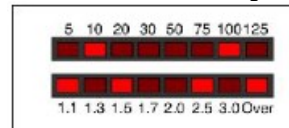

ERR_SWR_PWR: Outer
LEDs Toggle