

## Baofeng UV-5R Quick Reference



**(3) [Power / Volume]:** Turn the knob to turn on and off.

### **(8) [VFO/MR]**

- Press to toggle between VFO and Memory Channels.
- Use the **Up / Down** to change frequencies or channels or
- Key in a number on the mic. For channels, it's better to key in a 3-digit number (ex. Ch. 12 would be "012")

### **(12) [A/B]**

- Press to toggle between receiver A and B.
- Note where the arrow is on the left of the screen.

### **[\*]**

- Short press to reverse repeater output and input
- Long press to scan channels or frequencies

### **[#]**

- Short press to toggle between H/L power
- Long press to lock the controls

**(8) [VFO/MR]:** on the fly "programming":

- Enter the VFO mode.
- Select a receiver A/B
- Key in a frequency.

**(14) [MENU]** In the menu:

- use the **UP / DOWN** arrow to navigate to a setting
- press **[MENU]** again until the setting flashes, then the **UP / DOWN** arrow to change the setting.
- press **[MENU]** again to activate the change.

Menus to change for repeater use:

- 2 – TX power (Low / High)
- 11 – Rx tone (tone squelch is optional)
- 13 – Tx tone (tone required by the repeater)
- 25 – Repeater offset direction (+ / - )
- 26 – Repeater offset (VHF: "00600" / UHF: "05000")

Press **(14) [EXIT]** to exit the menu.

These settings will stay applied to the VFO receiver (A/B) initially selected (but not the other one) even if you change the frequency.

To go back to simplex, the same settings will have to be changed back.

This radio has 128 channels.