


# Icom 207H Quick Reference

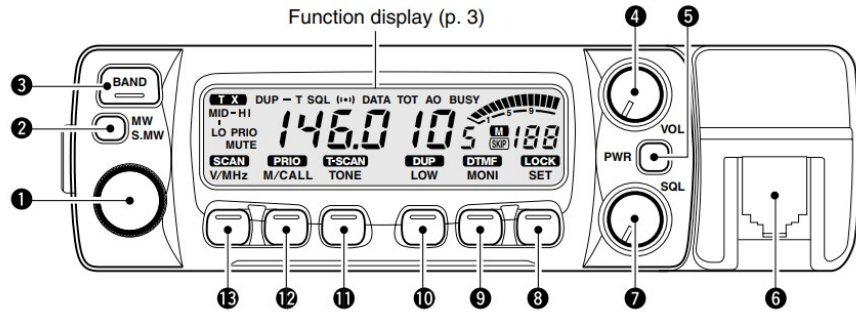

(5) [Power]: Press and hold to turn on and off.

Buttons 13 – 8 each have at least two functions:

- press and hold to access the upper function in bold
- press and release to access the lower function

(13) [V/MHz]

- Press and release for VFO. Knob (1) changes the frequency.
- Press and release again and knob (1) changes Mhz.
- Press and hold to scan.

(3) [BAND]

In VFO mode, there are four bands

- 118.000 – 136.000 MHz (Air)
- 136.000 – 174.000 MHz (2m)
- 320.000 – 400.000 MHz
- 400.000 – 479.000 Mhz (70cm)

(12) [MR]:

- Select Memory Chanel mode.
- Press again to change to Call Channel.

(13) [VFO]: on the fly “programming”:

To change band (Air, 2m, 300, 70cm)

- Press(3) [BAND]

To add a tone:

- Press (11) [TONE] to activate the tone then
- Press (8) [SET] multiple times to navigate the menu and changes “rt” and “ct” using the knob (1)
- Press (13) [V/MHz] to exit.

To force a different offset:

- Press and hold (10) [DUP] as needed.

To change tx power:

- Press (10) [LOW] to toggle:  
LO (5W), LO-MID (10W), MID-H (20W), H (50W / 35W)

To listen to the input of a repeater:

- Press (9) [MONI]

To store a VFO frequency to a memory channel:

- Setup frequency, tone, and offset in VFO
- Press (2) [MW S.MW]. The channel will flash.
- Select the desired channel with the knob (1)
- Press and hold (2) [MW S.MW]
- Press (12) [MR] to switch to channel mode.

This radio has 150 channels.