

Tunnel Client Setup

To enter the tunnel section:

1. Login
2. Click on the TUNNELS section on the right-hand side of the screen

Client Setup

To add a client, you'll need the server information you'll be connecting to. In this example, VE7NA is the server and VA7FI is the client.

VE7NA sent this information to VA7FI:

Wireguard Client connection details for VA7FI-hAPac3-1

Name: VA7FI-hAPac3-1
Wireguard key: [a long string of characters]
Network: 172.31.112.92:5525
Server address: rr.ve7na.ca


Note that the tunnel information provided may also be formatted like this (since the babel - 20250925 - a02d4ce3 nightly build):

Wireguard Client connection details for VA7FI-hAPac3-1

Remote server name: rr.ve7na.ca
Wireguard key: [a long string of characters]
Network:Port: 172.31.112.92:5525

To enter this information

1. select Wireguard Client and click the :

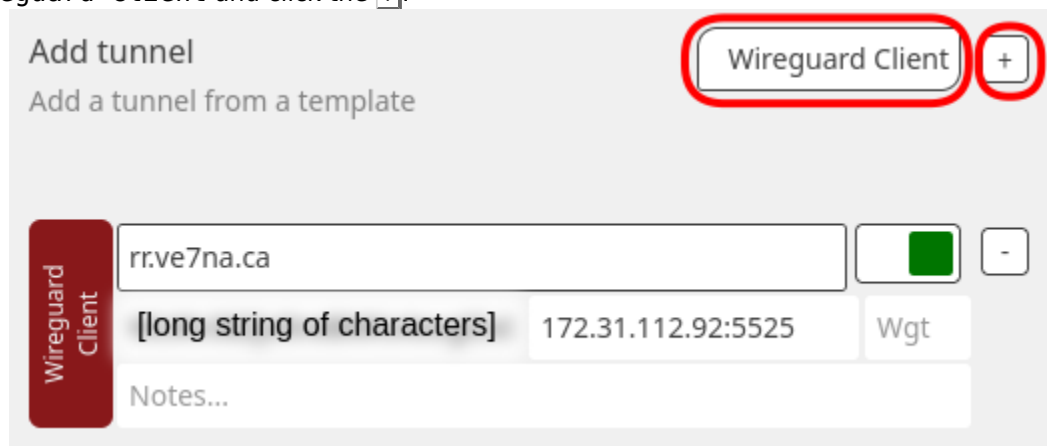

Add tunnel

Add a tunnel from a template

Wireguard Client

rr.ve7na.ca


[long string of characters]

172.31.112.92:5525

Wgt

Notes...

2. click Done
3. select Commit

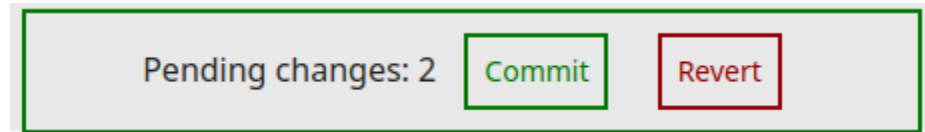

Toggle Switches

The boxes on the right of the tunnel configuration sections are “Toggle Switches” that control the state of the tunnel connection. There are three possible states:



1. **Disabled:** A tunnel is configured but the system will **not** try to connect it.
2. Enabled and **Not Connected:** A tunnel has been configured, and it is available to be connected. The system will attempt to make this connection (after saving and committing your changes).
3. Enabled and **Connected:** A tunnel connection is configured and active.

If you are setting up your first tunnel, you will want it to be in one of the **Enabled** states. It will show up initially in white (the Enabled and Not Connected state), and automatically turn to green when it makes a connection.