

Updating the Firmware

1. Update using the Administration page. The device will reboot once or twice.

Node Status Basic Setup Port Forwarding, DHCP, and Services Tunnel Server Tunnel Client **Administration** Advanced Configuration

Help Reboot

Firmware Update

Upload Firmware Browse... No file selected. Upload

Download Firmware - Select Firmware - Refresh Download

Load Local Firmware - Select Firmware - local_firmware.bin

3.23.4.0

2. Upload the new information to the AREDN server using the Basic Setup page. This will update [this map](#)

Node Status **Basic Setup** Port Forwarding, DHCP, and Services Tunnel Server Tunnel Client Administration Advanced Configuration

Optional Settings

Latitude 49.43316 Find Me! Apply Location Settings Show Map Upload data to AREDN Servers

3. Reinstall any additional packages such as [meshchat](#).
4. If you still see a message like this at the top of the home page:

AREDN Messages:
 ➔ all nodes: AREDN Version 3.23.4.0 has been released.

You can force it to disappear by executing the last command on the Advanced Configuration page:

Node Status Basic Setup Port Forwarding, DHCP, and Services Tunnel Server Tunnel Client Administration **Advanced Configuration**

AREDN Alert Settings

Alert Message Purge - execute to immediately delete all alerts from this node	Click EXECUTE button to trigger this action	Execute
---	---	---------

aredn.aam.purge