

Menu	Set > Connectors	
ACC/USB Output Select	AF	
ACC/USB AF Output Level	40%	
ACC/USB AF SQL	OFF (Open)	
ACC/USB AF Beep Speech... Output	OFF	
ACC/USB IF Output level	50%	
ACC MOD Level	50%	
USB MOD Level	40%	
DATA OFF MOD	MIC	
DATA MOD	USB	
Menu	Set > Connectors > CI-V	
CI-V Baud Rate	Auto	
CI-V Address	don't change but make a note	
CI-V Transceive	ON	
CI-V USB→Remote Tx Address	00h	
CI-V Output (for ANT)	OFF	
CI-V USB Port	Link to [REMOTE]	
Menu	> Set > Connectors	
USB Serial Function	CI-V	
Menu	> Set > Connectors > USB SEND Keying	
USB SEND	RTS	
USB Keying (CW)	OFF	
USB Keying (RTTY)	OFF	
Inhibit Timer at USB Connection	ON	

Mode	Digital	Voice
Default Frequency	7.078.00 USB-D	3.739.00 LSB
MUTI	(select and turn the knob)	
RF POWER	30%	100%
MIC GAIN	40%	40%
COMP	N/A	ON 4
MONITOR	ON 100%	OFF 100%
FUNCTION		
P.AMP ATT	OFF	OFF
AGC	OFF	SLOW
NOTCH	OFF	OFF
NB	OFF	ON
NR	OFF	OFF
IP+	OFF	OFF
VOX	OFF	OFF
COMP	N/A	ON
1/4	OFF	WIDE
MONI	ON	OFF