

Menu > SET > Connectors:	
ACC/USB Output Select	AF
ACC/USB AF Output Level	40%
ACC/USB AF SQL	OFF (Open)
ACC/USB AF Beep Speech... Output	OFF
ACC/USB IF Output level	50%
ACC MOD Level	50%
USB MOD Level	40%
DATA OFF MOD	MIC
DATA MOD	USB
Menu > SET > Connectors > CI-V:	
CI-V Baud Rate	Auto
CI-V Address	note it
CI-V Transceive	ON
CI-V USB→Remote Tx Address	N/A
CI-V Output (for ANT)	OFF
CI-V USB Port	Link to [REMOTE]
Menu > Set > Connectors:	
USB Serial Function	CI-V
Menu > Set > Connectors > USB SEND Keying:	
USB SEND	RTS
USB Keying (CW)	OFF
USB Keying (RTTY)	OFF
Inhibit Timer at USB Connection	ON

Mode	Digital	Voice
Default Frequency	7.078.00 USB-D	3.739.00 LSB
MUT (select and turn the knob)		
RF POWER	30%	100%
MIC GAIN	40%	40%
COMP	N/A	ON 4
MONITOR	ON 100%	OFF 100%
FUNCTION		
P.AMP ATT	OFF	OFF
AGC	OFF	SLOW
NOTCH	OFF	OFF
NB	OFF	ON
NR	OFF	OFF
IP+	OFF	OFF
VOX	OFF	OFF
COMP	N/A	ON
1/4	OFF	WIDE
MONI	ON	OFF