

Tunnelling

In order to setup a tunnel connection between two AREDN nodes, one needs to act as the server, and the other as the client. In this example, VA7FI is the server and VE7RBE is the client (and the details are made up):

On VA7FI's Tunnel Server page:



- The Tunnel Server Network: 172.31.39.164 is automatically assigned.
- The Client is VE7RBE's node name
- A unique password is create for VE7RBE
- Some optional Contact Info can be added.

VA7FI's public IP address will also need to be communicated to VE7RBE. You can quickly find it by searching for "what's my ip" in



On VE7RBE's Tunnel Client page:

